

Instructions to adjust X (Horizontal), Y (Vertical), and W (Enlargement):



Insert SDHC memory card



1. Connect power chord
2. Select film type
3. Set up the film

Activate Adjusting mode:



1. Press Power key



2. Press AND hold Up key at *dark screen until adjustment menu shows up then release the key


* Before the blue Wolverine screen appears



X Adjustment



Press Up or Down key to adjust X value

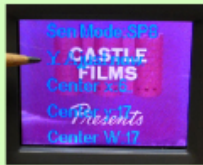

Press Enter key to adjust Y



Press Up or Down key to adjust Y value



Press Enter key to adjust W



Press UP or DOWN key to adjust W value



Press Menu key to save the adjustment